



POWER BANK

CP5000PEG
CP10000PEG
CP15000PEG

PRODUCT GUIDE

CHARGING

When the Power Bank is connected to the power, the LED indicator will light, indicating the charging status.

When Charging the Power Bank

Remaining Power	LED 1	LED 2	LED 3	LED 4
<25%	Flashing	Off	Off	Off
25-50%	On	Flashing	Off	Off
50-75%	On	On	Flashing	Off
75-95%	On	On	On	Flashing
100%	On	On	On	On

When Charging Your Devices

Remaining Power	LED 1	LED 2	LED 3	LED 4
0%	Off	Off	Off	Off
0-25%	On	Off	Off	Off
25-50%	On	On	Off	Off
50-75%	On	On	On	Off
75-100%	On	On	On	On

3

INTRODUCTION

The Power Bank (CP5000PEG/CP10000PEG/CP15000PEG) is a high capacity rechargeable lithium polymer battery designed for powering mobile devices such as phones, MP3 players, tablets, and handheld gaming devices while away from other power sources.

SPECIFICATIONS


MODEL	CP5000PEG	CP10000PEG	CP15000PEG
Battery Capacity	5000mAh	10000mAh	15000mAh
Rated Input	DC 5V 2.5A		
Rated Output	DC 5V 2.1A	DC 5V 2.1A (Max.)	
Fully Charging Time	~3.5 Hours	~5.5 Hours	~7.5 Hours
Dimensions	115*65* 12.4 mm	140.5*76.4* 14.6 mm	140.5*76.4* 20.4 mm
Weight	134 g	235 g	333 g
Environment	Storage: 14 to 122°F (-10 to 50°C) Operation: 32 to 104°F (0 to 40°C)		

Note: Power Bank can not be charged and discharged at the same time.

Note: The charging time indicates the required time to fully charge the power bank using an iPad4 charger after it is fully discharged by the iPad4.

1

PRODUCT VIEW

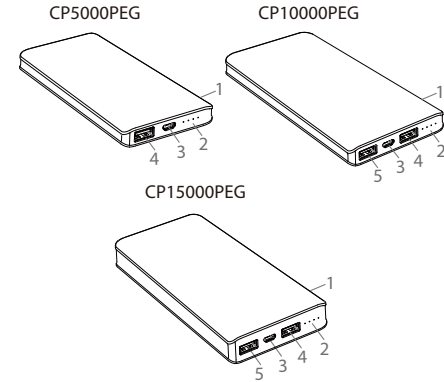

No	ITEM	DESCRIPTION
1	Power on/LED Indicator Switch	Press the button
2	LED Battery Life Indicator	As the "LED INDICATOR" table showing
3	Micro USB Input Port	5V/2.5A
4	USB Output Port 5V/2.1A (Max.)	5V/2.1A
5		5V/1A

2

INSTRUCTIONS

- Fully charge the power bank before your first use.
- Recharge the power bank every 3 months when not in use to maintain peak battery performance.
- Use a cable suitable for your device when charging the power bank.
- When the power bank enters protection mode (i.e. LEDs turn off and power bank will not charge) caused by issues such as a short circuit, press the button to make LEDs turn on to return to normal operation. If the LEDs do not turn on, that means the power level of the power bank is too low. Recharge the power bank.
- When your device is fully charged, disconnect the charging cable from the power bank.
- When power bank and charging device are fully charged, the power bank will turn off to protect your device.
- Store this product in a cool and dry environment when not in use. Store between 14 to 122°F (-10 to 50°C). Operate between 32 to 104°F (0 to 40°C).

CAUTIONS

1. Do not immerse this product in water or other liquids, as such use may result in fire or electrical shock. If water or other liquids enter the battery interior, unplug the product immediately from any attached power source or device.
2. Please recycle Power Bank in accordance with local environmental laws and regulations.
3. Do not expose cells or batteries to heat or fire. Avoid storage in direct sunlight.
4. Do not dismantle, open or shred secondary cells or batteries.
5. In the event of a cell leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

4

According to the Instructions.

This product is safe for regular use under normal conditions. As with any device using electrical power, some situations may be unsafe and injuries or damages could result. To minimize or avoid unsafe conditions, please read and follow the instructions before using.

Cyber Power Systems, Inc.

www.cyberpower.com

5

CyberPower®

行動電源

CP5000PEG
CP10000PEG
CP15000PEG

使用說明書

充電

將行動電源連接到USB傳輸線，對行動電源充電時，LED指示燈會自動亮起顯示充電量，其對應關係如下：

電池容量	LED 1	LED 2	LED 3	LED 4
<25%	閃爍	無	無	無
25-50%	亮	閃爍	無	無
50-75%	亮	亮	閃爍	無
75-95%	亮	亮	亮	閃爍
充電完成	亮	亮	亮	亮

放電

將行動電源連接到USB傳輸線，對數位產品充電時，LED指示燈會自動亮起顯示充電量，其對應關係如下：

電池容量	LED 1	LED 2	LED 3	LED 4
0%	無	無	無	無
0-25%	亮	無	無	無
25-50%	亮	亮	無	無
50-75%	亮	亮	亮	無
75-100%	亮	亮	亮	亮

產品介紹

CP5000PEG/CP10000PEG/CP15000PEG系列行動電源搭載高效能鋰電池，適用於行動電話、MP3播放器、平板電腦、掌上型遊戲機。


產品規格

機型	CP5000PEG	CP10000PEG	CP15000PEG
額定容量	3500mAh/ 17.5Wh	7000mAh/ 35Wh	10500mAh/ 52.5Wh
電容量	5000mAh	10000mAh	15000mAh
輸入	DC 5V 2.5A		
輸出	DC 5V 2.1A	DC 5V 2.1A (最大值)	
充電時間	~3.5 Hours	~5.5 Hours	~7.5 Hours
產品尺寸	115 x 65 x 12.4 公釐	140.5 x 76.4 x 14.6 公釐	140.5 x 76.4 x 20.4 公釐
產品重量	134 公克	235 公克	333 公克
環境溫度	存放: -10~50度C 使用: 0~40度C		

註：此產品不支援邊充電邊放電功能。

註：充電時間標示之參考基準為行動電源實際對iPad4進行放電至無電量顯示後，再以iPad4之充電器對行動電源進行充電至電量完全充滿顯示所需之充電時間。

產品外觀介紹

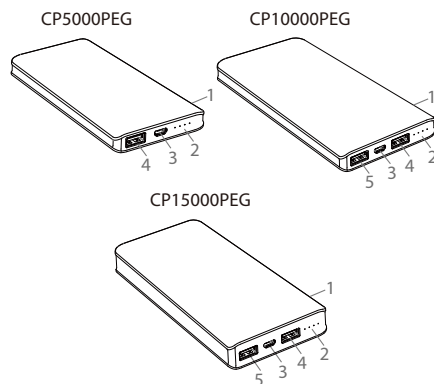

編號	名稱	描述
1	電源開關 LED指示燈開關	輕按電源按鍵
2	LED指示燈	請見下述"LED指示燈說明"
3	USB電源輸入端	5V/2.5A
4	USB輸出孔	5V/2.1A
5	(最大值5V/2.1A)	5V/1A

使用說明

- 第一次使用前，請將行動電源充滿電，讓產品進入正常使用模式。
- 產品未使用的情況下，每三個月需充電，確保行動電源能維持高電力的效能。
- 在進行本產品充電或使用本產品對數位產品充電時，請自行選配合適的連接線。
- 在對數位產品充電時，當本產品因輸出短路等各種原因進入保護狀態的時候(即本產品的LED燈全滅)，此時請再輕按電源按鍵，當LED燈亮起時，代表產品狀態恢復可正常使用，若LED燈未亮起，則代表本產品電量不足，請儘快充電。
- 當數位產品充滿電後，請將連接線拔除，避免損耗。
- 當數位產品或行動電源充滿電後，電源會自動開啟休眠功能，停止工作，保護數位產品及行動電源。
- 將此行動電源存放於涼爽乾燥的環境中，並存放在-10~50度的環境中，操作時則在0~40度環境中。

注意

使用本產品前，請詳閱下列警告事項並依照說明書上之使用說明。

- 請勿將產品浸於水或液體中，此行為可能會導致著火或觸電。如果水或液體流入行動電源中，請立即拔除連接在此產品上的電源或電子裝置。
- 請根據當地法律規範回收處理此行動電源。
- 請勿將此產品投入火焰中，或置放於高溫環境。
- 請勿拆解、移除產品或產品上的任何零件。
- 若發生電池漏電時，請勿讓電池漏電之液體碰到眼睛及皮膚，若有不小心接觸到請用清水沖洗，並立即就醫。

根據上述指示，本產品在正常使用範圍下是安全的，但仍有可能造成意外損害，為了降低及避免災害發生，使用此產品前請詳閱此說明書。

Cyber Power Systems, Inc.
www.cyberpower.com